


# T4(052-XXX) TO MFU (011-160) 160 WIRING CONFIGURATION

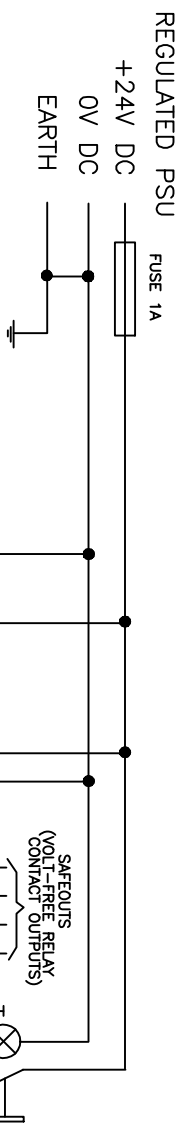


\*\*\* IMPORTANT \*\*\*

USE T4 INSTALLATION SHEET AND T4 INSTALLATION GUIDE FOR T4 FUNCTIONS REFERENCE

ALL WIRES NOT USED MUST BE TERMINATED SAFE.

Note T4 (052) light curtain needs to be set in Auto-start configuration via dipswitch setting. refer to T4(052) light curtain installation guide.

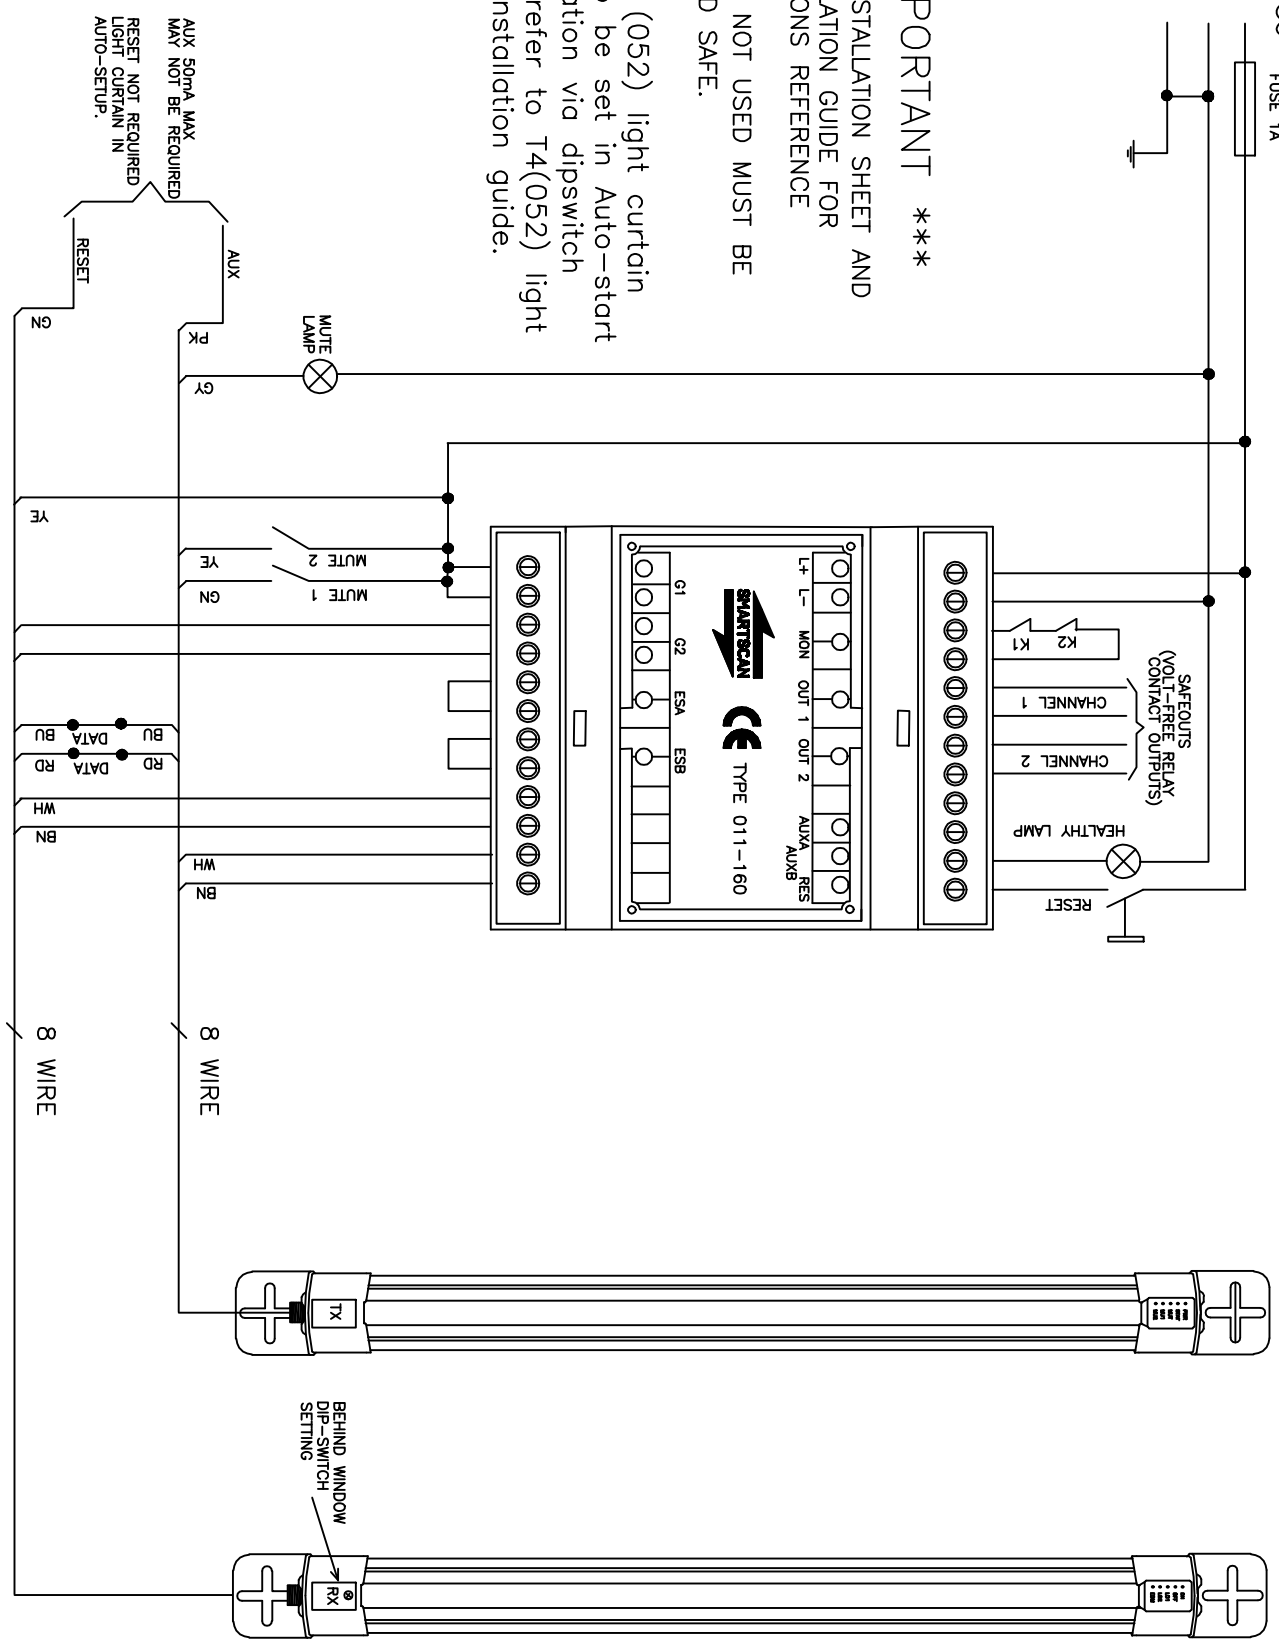

BEHIND WINDOW  
DIP-SWITCH  
SETTING